

Skat

INSTALLATION MANUAL



⚠ Safety Notes:

- The product must be installed, maintained, and operated as instructions below.
- Before starting installation of this product, make sure power supply is disconnected.
- Only to be installed by authorized electrician.
- Do not use abrasives or solvents when cleaning.
- Do not install the product if it appears damaged in any way. Check with manufacturer if in doubt.
- Do not modify this fitting in any matter as this will void warranty.
- Check protection class, if class I, it must be earthed.
- Disconnect power supply before maintenance or cleaning.

⚠ Sikkerhetsinformasjon:

- Følg installasjonsmanual for korrekt montering.
- Koble alltid fra strømmen før montering eller vedlikehold.
- Kan kun monteres av autorisert elektriker.
- Monter ikke produktet hvis det er synlig skade. Kontakt forhandler eller produsent.
- Bruk ikke løsemidler ved rengjøring
- Produktet skal ikke under noen omstendigheter endres eller modifiseres.
- Sjekk produktets isolasjonsklasse. Ved isolasjonsklasse I skal produktet jordes.



compliance with the qualied technician only, in out by trained and regulation in force. maintenance of the luminaire must be carried Jonnection and

) 30-60min.

⊕230V AC

system(e.g. drain pipe) an additional draining



 
any maintenance. fitting before carrying out power connected to the Make sure there is no

62471




luminaire. May be harmful Do not stare at operating _ED risk group 0-1 IEC fill it with water, if after 30 drainage layer(gravel) and compulsory to integrate the luminaire it is minutes water is still in luminaire on a 20-30cm Place the inground

to the eyes.



areas.

 

installation on hollow inground luminaire for tion, do not place the lo avoid water stagna-



effective protection against water or moisture STOP system giving equipped with a H2O All luminaires are

passage along connect-



minutes before to

the IP67

equal to or greater than connection cable must be factory pre-wired for the luminaires with the electrical connection The protection rating of

> the IP67. equal to or greater than for projectors must be the electrical connection

> greater than the IP67. must be equal to or for inground luminaires the electrical connection

to avoid the moisture. assemble them. In order working for 30-60

Make the luminaires

projectors or bollards. nground luminaires,

you disassemble the

IP connection ≥ IP67

The protection rating of

 
The protection rating of

 
IP connection ≥ IP67

 
connection ≥ IP67












aggressive agents and

 

fertilize, weed-killer, lime). chemical substances(e.g. Keep away from

shall be exclusively cable or cord of the luminaire is damaged, it

the external flexible

Tighten and release screws alternately or

For an easy mainte-nance(unscrewing) of the

GREASE SILICONE

luminaire we recommend

cross wise.

protecting screws threads with silicone grease


On stainless steel parts to prevent dirt deposit on

use dedicated cleaners frames and screws' head. Keep the luminaire clean

weather. before exposure to

technician, in order to manufacturer or qualified replaced by the

avoid a hazard.

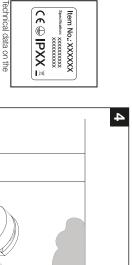

pressure cleaners.

from the risk of damage. these phenomena attenuates the intensity of the electrical system against overvoltages on a protection device surges. The installation of sensitive to voltage

Do not use water high

Electronic equipment

In case of diffuser

Retain the instructions.

product rating label.

to switch on the fitting. damage change it before

